

Application instructions for GAP Roofing WaterGuard Self-Adhered SBS Base Sheet

Description: GAP Roofing WaterGuard Self-Adhered SBS Base Sheet is a highly flexible dual coated SBS modified cap sheet constructed with fiberglass mat, self-adhering adhesive, a split removable release film on the adhesive side. This product is typically used as the base ply in a 2-ply low slope membrane roofing system along with our GAP Roofing WaterGuard Self-Adhered Cap Sheet and in other cold applied built up roofing systems.

Uses: GAP Roofing WaterGuard Self-Adhered SBS Base Sheet can be used as a roofing membrane and flashing membrane in low sloped residential applications and flashing details. This base sheet is easily applied by removing the split release film from the adhesive side pressing the membrane's self-adhesive back surface into place.

Roof Deck and General Information: Roof deck must be clean, dry smooth, and structurally sound to receive the new roofing system. Drainage must be incorporated in the design to prevent ponding water. Proper ventilation required. Apply materials only in fair dry weather when the interface temperature (air, roof deck, membrane) is a minimum of 50° F and rising.

Application: Install a full width sheet of GAP Roofing WaterGuard Self-Adhered SBS Base Sheet cut into manageable job appropriate lengths (typically 15-25' in length). Set into position. Carefully remove one half of the release film pulling it at a 45 degree angle making sure the position of the material does not change. Carefully remove the second half of the release film and ensure adhesion by putting pressure on the material. Make sure wrinkles and buckles are avoided. All of the GAP Roofing WaterGuard Self-Adhered SBS Base Sheet should be rolled with a heavy weight roller to promote proper adhesion. The following sheets are to be installed in the same manner lapping 4" on the sides and 6" on the ends. Be sure to remove release liner from selvage edge on previous course as you apply the head lap.

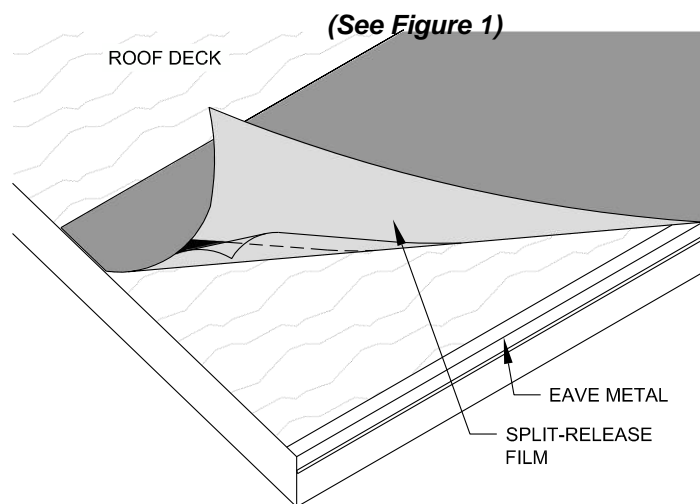


Figure 1 - One Side of the Split-Release Film Overlaps the Other for Easy Removal

THESE ARE THE APPLICATION INSTRUCTIONS FOR WATERGUARD SA MINERAL SURFACE UNDERLAYMENT. GAP ROOFING, INC. SHALL NOT BE RESPONSIBLE FOR LEAKS OR OTHER ROOFING PROBLEMS RESULTING FROM FAILURE TO FOLLOW THESE INSTRUCTIONS. For questions about WATERGUARD or it's application contact GAP Roofing's Technical Services Department at 800-880-9808.